

love machine[®]

PATENT # 7,267,646



Usage and Care Instructions

All persons and characters they portray pictured on the packaging of this product and/or in any materials associated with it were at least 18 years of age at the time of photography. With respect to any picture appearing on the packaging of this product and/or any graphical materials associated with it, any depiction of sexually explicit conduct is simulated, as those terms are defined in connection with 18 U.S.C. § 2257 and associated regulations, and the depictions are therefore exempt from the record-keeping and disclosure requirements thereof.

© 2003 Topco Sales®, Chatsworth, CA. Topco Sales®, CyberSkin®, PassionSkin®, T.L.C.®, Love Bullet® and Love Machine® are registered trademarks of Vast Resources, Inc. dba Topco Sales®.

For questions, comments and suggestions, e-mail: Info@TopcoSales.us



PATENT # 7,267,646

Congratulations on the purchase of your TLC[®]
Love Machine[®] !

You have chosen the only device of its kind that offers total angle adjustability, variable speed stroking and thrusting, as well as 5 multi-speed vibration and pulsation massage programs. This versatile sex toy is like no other, specifically designed to provide ultimate sexual satisfaction to both men and women!

Please read the following instructions to help you set up, maintain, and most of all, **enjoy your Love Machine[®]!**

Getting Started

Your Love Machine® comes fully assembled! Simply connect your desired attachments.



Six attachments and accessories included!

Set Up



Grounded outlet

1. Place your Love Machine® on a flat surface* and plug into a grounded outlet.



** For greater versatility, you may also use the wall mounting brackets (located on the bottom of the Love Machine®) to attach it to a wall or door!*

2. There is an elastic splash guard in place to protect the inner workings of your Love Machine® from fluids and dust. Locate the hole in the splash guard and make sure that it lines up with the appliance socket inside the machine. The appliance socket looks similar to a light socket, and is where you will screw your various pleasure attachments into place.



Using your Love Machine®

Now the fun really starts!

Pleasure Attachments

1. Select which pleasure attachment you would like to enjoy. Your Love Machine® comes with 3 unique attachments. Each has a threaded base that will screw into the appliance socket.

To fully enjoy your pleasure attachments, use a generous amount of water-based lubricant.



*PassionSkin®
Stroker for Him*

 
*6 Inch
Penis*

*Slimline
Anal Pleaser*

2. Gently screw your attachment straight into the appliance socket. The threads will line up easily and you need not force it.



Operation



Look for this sticker

1. To turn on your Love Machine[®], press the Off/On button located on the bottom of the side panel.



2. To start the thrusting/stroking mechanism, locate the top dial on the remote control unit. Turn the dial up until you hear a click and the red LED indicator light goes on. At this point, the Love Machine[®] will begin thrusting/stroking.



Remote control unit

You control the speed of this action by turning the dial up or down.



Angle Adjustment

1. The Love Machine® features 90° angle adjustment, so that you can find the exact pleasure position that's right for you!
2. To change the angle, locate the angle adjustment knobs on the side panels.




Gently loosen the knobs by turning them in opposite directions.

At this point, you may easily slide your pleasure attachment and splash guard into any angle, from vertical to horizontal or anywhere in between.



3. When you have found the angle you desire, simply re-tighten the knobs and enjoy!

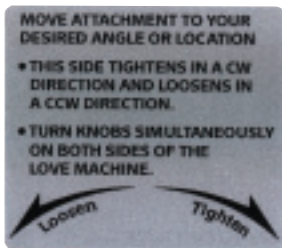

Look for this sticker

Using Vibration & Pulsation Accessories

1. To make your Love Machine® experience even more enjoyable, TLC® has included three vibration and pulsation accessories!



Slimline Vibe G-Spot Vibe Vibrating Love Bullet®

2. To use these accessories, locate the three jacks on the bottom of the side panel. Plug the accessory that you desire into any one of the jacks. **You may plug in one, two, or even all three of the accessories all at one time!**

THREE VIBRATOR CONNECTIONS

Look for this sticker



3. To turn on and control the vibration and pulsation accessories, locate the **On/Off** button on the remote control. Continue pressing this button to cycle through the massage programs until you find the one you want.

5 Unique Massage Programs

1. Foreplay
2. Tease
3. Pulsation
4. Vibration
5. Climax



You control the speed of your program by turning the lower dial on the side of the remote control up or down.





Hint!

For additional stimulation, insert the Love Bullet® into the PassionSkin® Stroker's sleeve.

Using the Retractable Handle

1. The retractable handle is useful for transport and sexual positioning. To use it, press the button located on the



bottom of the handle. Continue depressing the button and pull the handle up until you hear a *click*. Your handle is now ready for use.

2. To retract the handle, press the button and push down until you hear a *click*. The handle is now back in its resting position.



Care & Cleaning

CAUTION: Always unplug your Love Machine® before cleaning.

1. The Love Machine® is a sturdy piece of equipment, made of high impact, stress-resistant plastic. However, as with any piece of electrical/mechanical equipment, handle it with care and avoid banging it around.
2. To clean the outside of your Love Machine®, simply wipe it down with a clean, lint-free cloth, lightly saturated with rubbing alcohol.
3. To clean the inside of your Love Machine®, remove the splash guard by opening the Velcro® connection and pulling it away. Next, remove the screw located on the



bottom of the Love Machine®. Then, press in the tab to remove panel. You may then wipe down the area with a clean, lint-free cloth, lightly saturated with rubbing alcohol.

CAUTION: Do not submerge vibration and pulsation accessories in water.

4. To clean the splash guard, hand wash in cold water, using a delicate detergent. Rinse completely and pat off excess water with a clean towel. Allow to air dry completely.
5. To clean pleasure accessories, wash in warm water with liquid anti-bacterial soap. Pat dry with a clean towel and allow to air dry completely. Lightly powder the PassionSkin® Stroker with CyberSkin® Renew or cornstarch to restore its original silky smooth texture.

30 Day Limited U.S.A. Warranty

Insure your warranty protection as stated below by registering the product at <http://www.usaplasticsinc.com>

30 DAY LIMITED WARRANTY: Manufacturer will repair or replace this product if there is a mechanical defect not due to misuse or unauthorized repair. No warranty applies to products purchased outside the United States or in Texas, Kansas, Mississippi and Alabama. Manufacturer does not warrant this product will achieve a particular result or that it is fit for a particular purpose and is not liable for any damages related to the use of the product. Never immerse battery or electrically operated items in water. Return this product in its original package with the original receipt within 30 days of purchase to: U.S.A. Plastics, P.O. Box 3566, Chatsworth, CA 91313 and include a check or money order for \$50.00.

love machine[®]

PATENT # 7,267,646

7278710